


The drawing below shows the float switch installed through a 32mm hole in the top of the tank as close to the centre as possible, the float is in the "Low" position which will tell the Pump Genie to use town mains water. I recommend that you have the float switch and the weight 250 - 300mm apart and the weight should be at least 250mm from the bottom of the tank.

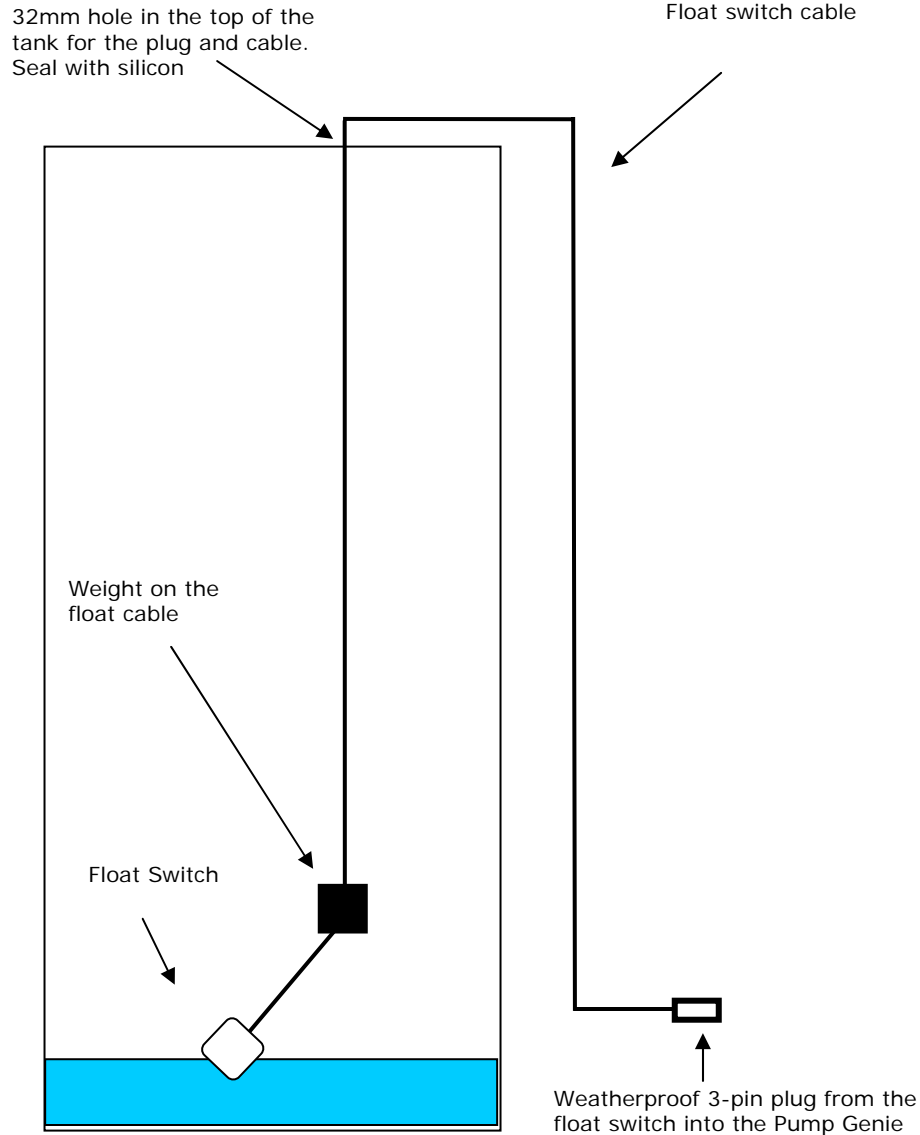

The drawing below shows the water level at about 30% and so the float switch floats up on the water and will have switched so that the Pump Genie knows that it can safely use the rainwater from the tank.

Please install the float and cable as close the middle of the tank as possible so as to prevent the switch from touching the tank wall.

